# FLASH F70XX 7" LCD position indicators with audio





## Applications

Car-OP position indicator Hall position indicator



### **Display features**

Up to 3 inches characters Automatic centering Up to 3 Digits Viewing angle of 160 degrees 16 Millions Colors 1024 x 600 resolution Portrait/Landscape



### Audio features


3 watt amplifier Voice annunciation Arrival Gong Fully configurable (WAV/MP3) External speaker



917 Mgr Grandin, Suite 304B Quebec City Québec, Canada G1V 3X8 1 418 476-4802 info@vidatech.ca

#### TO ORDER :

Input "0" : Discrete "1" : Binary "2" : CanBus

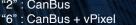



Voice "0": None "1": Arrival gong "2": Voice


### F701X - Binary 7" LCD indicator

**F7010** Binary 7" LCD indicator

No voice

**F7012** Binary 7" LCD indicator with voice

With voice

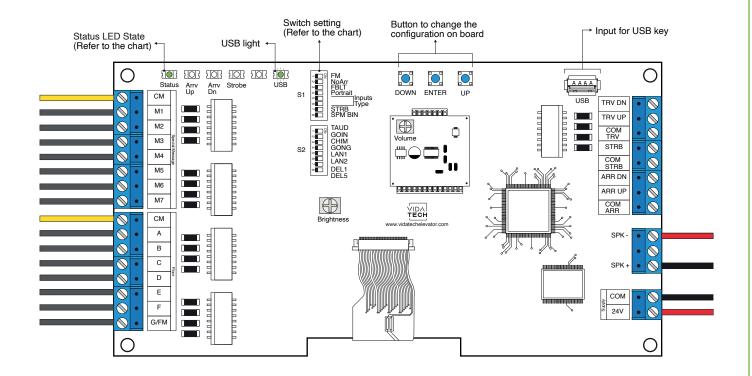


- Supply must be between 16VDC to 28VDC.
- Speaker must be  $4\Omega$  to  $45\Omega$ , 5Watts minimum.
- Up to 12 minutes 38 seconds of message time.
- Speaker wire length must be less than 500 feet to prevent noise.
- .via files are for audio configuration. Only one .via file must be present on the USB dongle.
- VCI, VIA and Visual files must be placed on the root of a USB dongle, then connected to a powered indicator until the USB light stops blinking.
- · Volume of the voice annunciator is controlled by "volume" potentiometer.
- Brightness of the LCD is controlled by "brightness" potentiometer.
- Must be installed in COP or hall fixtures.
- To get the actual configuration of the indicator, connect a void USB dongle, then the configuration will upload into the dongle.
- You can modify the stair digit displayed by the indicator by modifying the .vci file with the Storm software, available on our website.
- You can modify the visual configuration with the Storm software available on our website.
- · Switch setting :

SW #	#	Text	Description						
	1	FM	ON -> Blank the display in fire mode						
	2	NoArr	ON -> Blank the arrow						
	3	FBLT	ON -> 100% backlight intensity OFF -> 80% backlight intensity (Backlight life enhanced)						
	4	Portrait	ON -> Portrait mode (If existing within the config)						
S1			Binary	1 Wire/Floor	Gray Code	N/A			
	5	– Input		•		•			
	6				•	•			
	7	STRB	ON -> Strobe active Low OFF -> Strobe active High						
	8	SPM BIN	ON -> Binary OFF -> 1 wire per message						
	1	TAUD	ON -> Play all audio file saved in memory						
	2	GOING	ON -> Going Up/Dn active						
	3	CHIM	ON -> Passing Chime active						
	4	GONG	ON -> Cabin gong active						
S2	Language		French	English	1 - French 2 - English	1 - English 2 - French			
	5	LAN1		•		•			
	6	LAN2			•	•			
	7	DEL1	ON -> Add 0.5 second of silence after the strobe						
	8	DEL.5	ON -> Add 1 second of silence after the strobe						

### F702X – CANBus 7" LCD indicator

F7021 CANBus 7" LCD indicator with gong

No voice

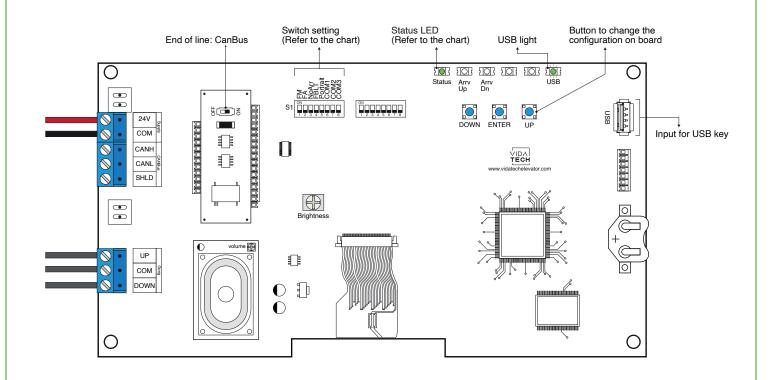

- Supply must be between 16VDC to 30VDC.
- Must be installed in COP
- Brightness of the LCD is controlled by "brightness" potentiometer.
- Press "ENTER" to go the main menu of the LCD, then navigate with "UP/DOWN" switches. Refer to F7022 operation manual on our website.
- To activate Gong option, user must program floor adress in the menu.
- Switch setting :

SW #	#	Text	Description						
	1	FM	ON -> Blank the display in fire mode						
S1	2	FA	ON -> Blank the display in fire alternate mode						
	3	NoArr	ON -> Blank the arrow						
	4	FBLT	ON -> 100% backlight intensity OFF -> 80% backlight intensity (Backlight life enhanced)						
	5	Portrait	ON -> Portrait mode (If existing within the config)						
	Communication		CAN Vidatech	CAN JRT	CAN GAL	CAN elevator controls	CAN TKE	CAN Smartrise	
	6	COM1		•		•		•	
	7	COM2			•	•			
	8	COM3					•	•	


### F702X – CANBus 7" LCD indicator

F7020 CANBus 7" LCD indicator

No voice

F7022 CANBus 7" LCD indicator with voice

With voice

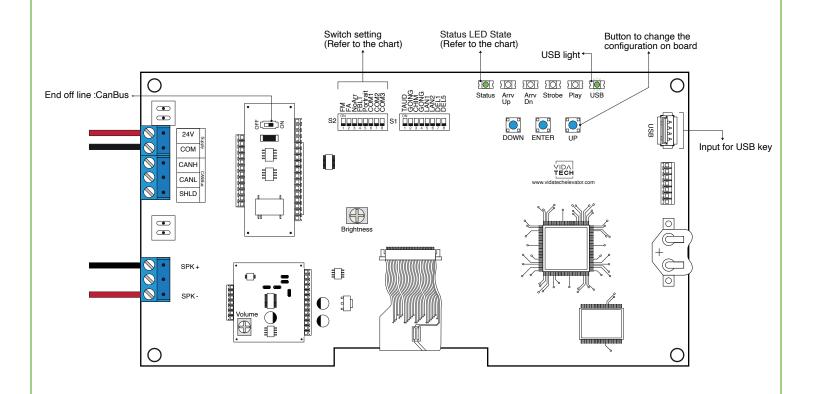

- Supply must be between 16VDC to 28VDC.
- Speaker must be  $4\Omega$  to  $45\Omega$ , 5Watts minimum.
- Up to 12 minutes 38 seconds of message time.
- Speaker wire length must be less than 500 feet to prevent noise.
- .via files are for audio configuration. Only one .via file must be present on the USB dongle.
- .via and visual files must be place on the root of a USB dongle, then connected to a powered voice until the USB light stops blinking.
- Must be installed in COP.
- Brightness of the LCD is controlled by "brightness" potentiometer.
- Volume of the voice annunciator is controlled by "volume" potentiometer.
- Press ENTER to go the main menu of the LCD, then navigate with UP/DOWN switches. Refer to F7022 operation manual on our website.
- · Switch setting :

SW #	#	Text	Description						
	1	FM	ON -> Blank the display in fire mode						
	2	FA	ON -> Blank the display in fire alternate mode						
	3	NoArr	ON -> Blank the arrow						
S2	4	FBLT	ON -> 100% backlight intensity OFF -> 80% backlight intensity (Backlight life enhanced)						
	5	Portrait	ON -> Portrait mode (If existing within the config)						
	Communication		CAN Vidatech		CAN JRT		CAN GAL		
	6	COM1			•				
	7	COM2						•	
	8	COM3							
	1	TAUD	ON -> Play all audio file saved in memory						
	2	GOING	ON -> Going Up/Dn active						
	3	CHIM	ON -> Passing Chime active						
	4	GONG	ON -> Cabin gong active						
S1	Language		French		English	1 - French 2 - English		1 - English 2 - French	
	5	LAN1			•			•	
	6	LAN2				٠		•	
	7	DEL1	ON -> Add 1 second of silence after the strobe						
	8	DEL5	ON -> Add 0.5 second of silence after the strobe						

- Play Test option (TAUD): The device will play each voice file saved in the system in loop and will display the ASCII associated with the file playing.
- Going Option (GOING): The voice will play the file associated with the type « Going UP » or « Going Down » when STRB is asserted AND TRV UP or TRV DN.
- Chime Option (CHIM): The voice will play the file associated with the type « CHIME » each time the stair are changing.
- Gong Option (GONG): The voice will play the file associated with the type « Gong UP » or « Gong Down » when ARR DN or ARR UP are asserted.

