


F43X2-D – CANBus 4.3” LCD indicator with voice

Installation manual

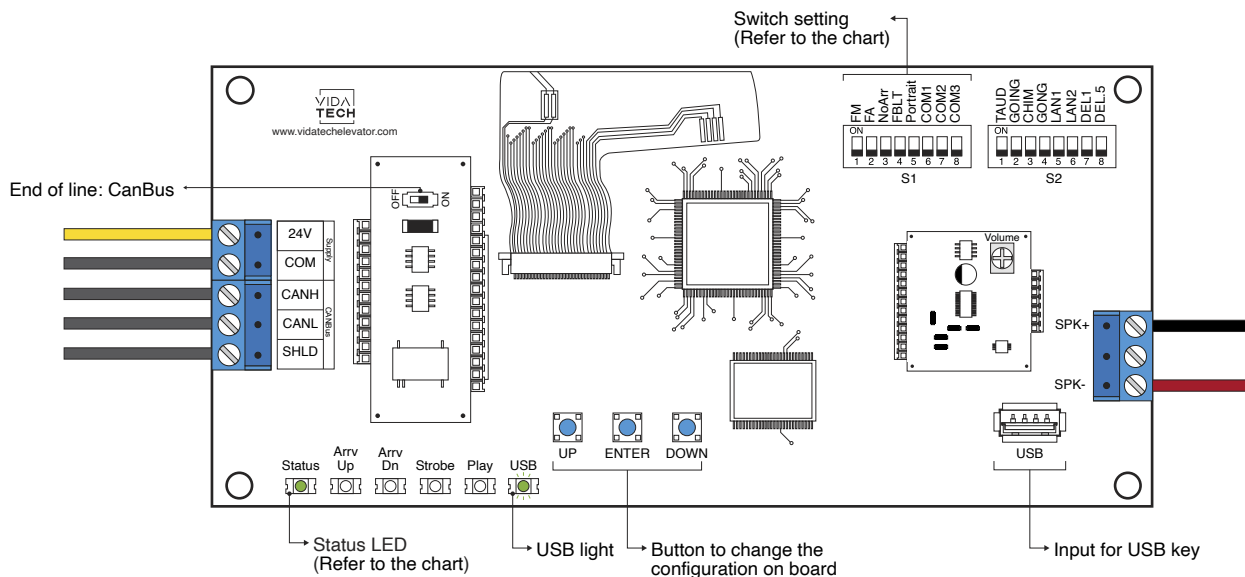

- Supply must be between 16VDC to 30VDC.
- Speaker must be 4Ω to 45Ω, 5Watts minimum.
- Up to 12 minutes 38 seconds of message time.
- Speaker wire length must be less than 500 feet to prevent noise.
- .via files are for audio configuration. Only one .via file must be present on the USB dongle.
- .via and visual files must be placed on the root of a USB dongle. To upload your resources, connect the USB dongle while the F43X2 is under power. Do not remove the USB dongle as long as the USB led is blinking.
- Must be installed in COP or hall fixtures.
- To get the actual configuration of the indicator, connect an empty USB dongle, then the configuration will upload into the dongle.
- You can modify the stair digit displayed by the indicator by modifying the .vci file with the Storm software, available on our website.
- You can modify the visual configuration with the Storm software available on our website.
- Press ENTER to go to the main menu of the LCD, then navigate with UP/DOWN switches. Refer to F4322 operation manual on our website.


- Status LED :

Status LED	Description
Steady	No communication
Slow Blink	System error
Fast Blink	Communication active with no error


- Switch setting :

SW #	#	Text	Description					
S1	1	FM	ON -> Blank the display in fire mode					
	2	FA	ON -> Blank the display in fire alternate mode					
	3	NoArr	ON -> Blank the arrow					
	4	FBLT	ON -> 100% backlight intensity OFF -> 80% backlight intensity (Backlight life enhanced)					
	5	Portrait	ON -> Screen Portrait (If configuration supports this mode)					
	Communication		CAN Vidatech	CAN JRT	CAN GAL	CAN elevator controls	CAN TKE	CAN Smartrise
	6	COM1		●		●		●
	7	COM2			●	●		
	8	COM3					●	●
	S2	1	TAUD	ON -> Play all audio file saved in memory				
2		GOING	ON -> Going Up/Dn active					
3		CHIM	ON -> Passing Chime active					
4		GONG	ON -> Cabin gong active					
Language		French	English	1 - French 2 - English	1 - English 2 - French			
5		LAN1		●			●	
6		LAN2			●		●	
7		DEL1	ON -> Add 1 second of silence after the strobe					
8		DEL5	ON -> Add 0.5 second of silence after the strobe					

- **Play Test option (TAUD):** The device will play each voice file saved in the system in loop and will display the ASCII associated with the file playing.
- **Going Option (GOING):** The voice will play the file associated with the type « Going UP » or « Going Down » when STRB is asserted AND TRV UP or TRV DN.
- **Chime Option (CHIM):** The voice will play the file associated with the type « CHIME » each time the stair are changing.
- **Gong Option (GONG):** The voice will play the file associated with the type « Gong UP » or « Gong Down » when ARR DN or ARR UP are asserted.

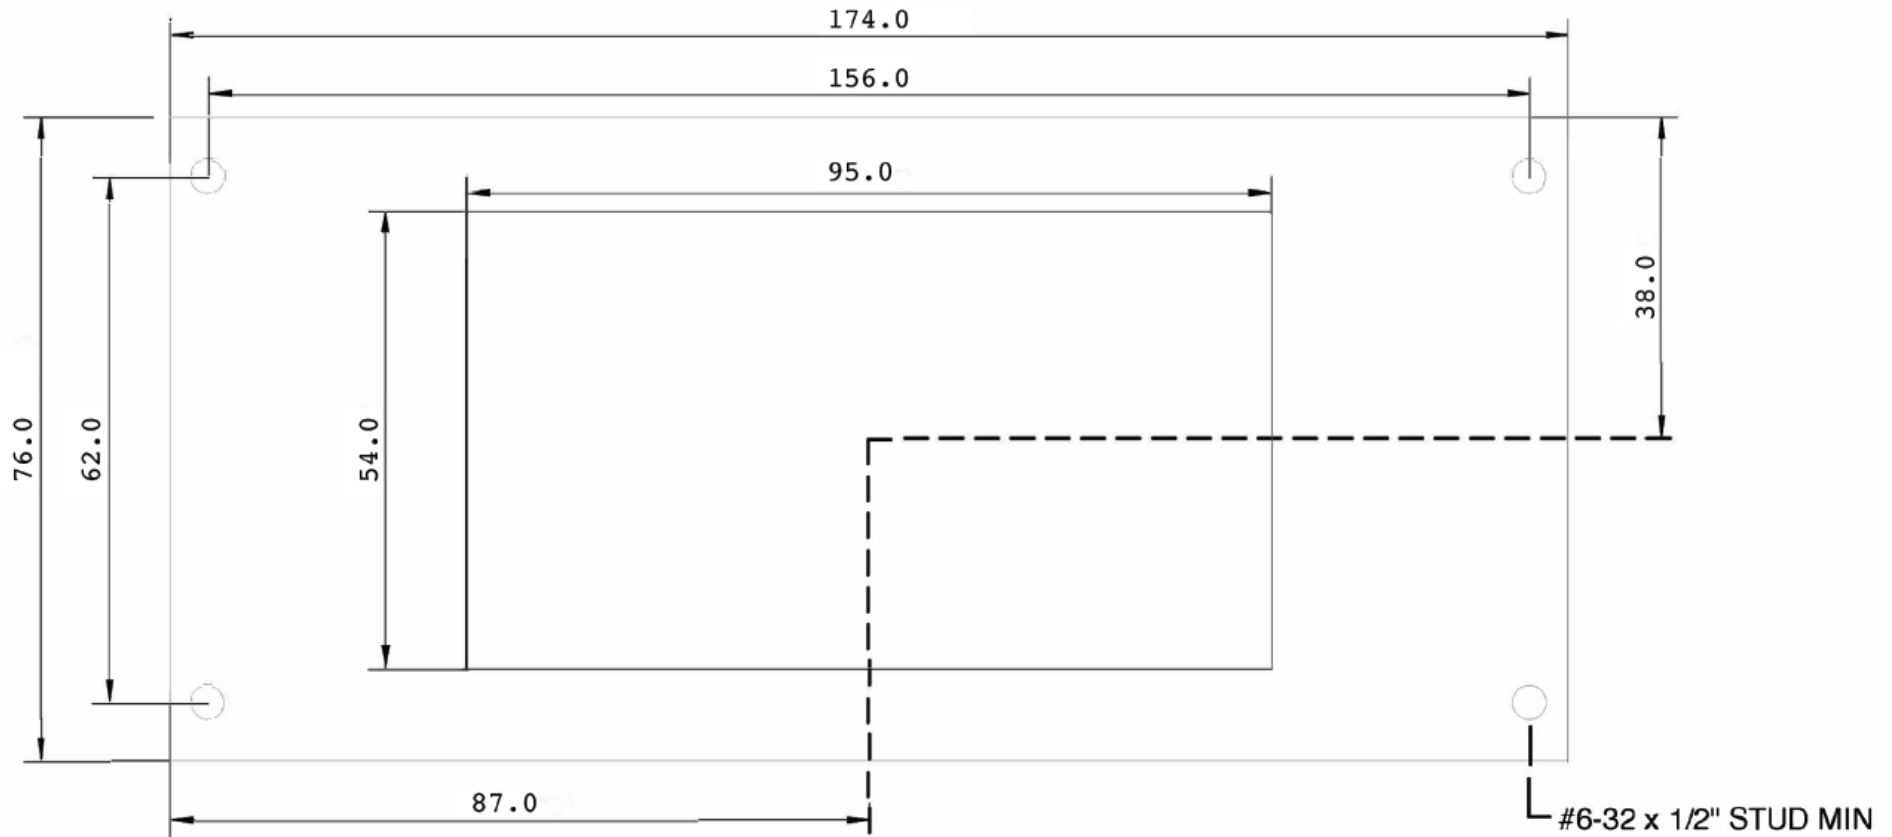

Board thickness: 24 (including lens)

	Title: F4322-D – CANBus 4.3" LCD indicator with voice		Unit: MM	
	Tolerance:	Material:	Finish:	
		Scale:	No. piece: N/A	Date: 2022-04-05
	Angular:	Rev:	Name:	Page: 1/1