


## S2120-3X – CANBus position indicator

## Installation manual

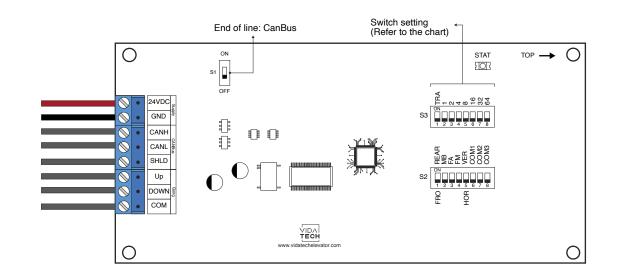

- Supply must be between 16VDC to 30VDC.
- The switch S1 must be set "ON " only on the end of the line position indicator.
- Switch setting :

SW #	#	Text		Description																															
S2	1	REAR/ FRO	0	REAR = rear and FRO = front. ON -> The position indicator is located at the rear opening. OFF-> The position indicator is located at the front opening.																															
	2	MB																																	
	3	FA	0	ON -> Blank the display in fire alternate mode.																															
	4	FM	0	ON -> Blank the display in fire mode.																															
	5	VER/HOR		ON -> Characters are displayed vertically. A maximum of two characters can be displayed. OFF -> Characters are displayed horizontally.																															
	Con	nmunication	С	AN	Vic	late	ch	Τ	CAN JRT					CAN GAL						CAN elevator controls					CAN TKE						CAN Smartrise				
	6	COMM 1																		•															
	7	COMM 2																																	
	8	COMM 3																	Т						•					Т					
S3	1	TRA	0	ON -> Transition mode is active.																															
	Adı	resse Floor	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
	2	1		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		٠	
	3	2			•	٠			•	•			•	•			•	•			•	٠			•	•			•	•			•	٠	
	4	4					•	•	•	•					٠	•	•	•					•	•	•	•					•	•	•	٠	
	5	8									•	•	•	•	٠	•	•	•									٠	•	•	•	•	•	•	•	
	6	16																	•	•	•	٠	•	•	•	•	•	•	•	•	•	•	•	•	
	7	32																																	•
	8	64																																	