


F1021 – CANBus 10" LCD indicator with gong

Installation manual

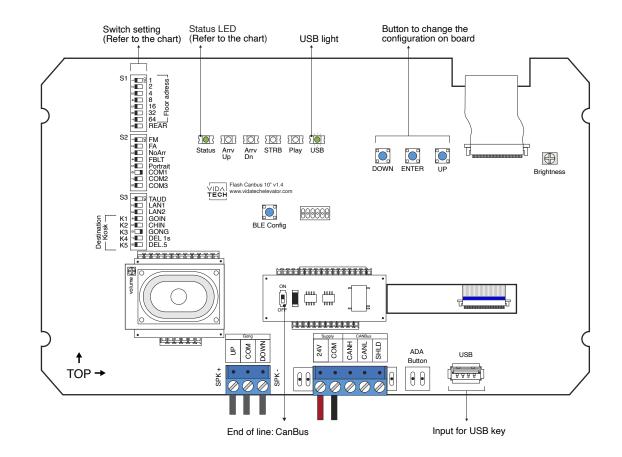

- Supply must be between 16VDC to 30VDC.
- Must be installed at landings.
- Press "ENTER" to go the main menu of the LCD, then navigate with "UP/DOWN" switches. Refer to the operation
 manual on our website.

IMPORTANT

- 1. Select the floor address with dipswitch S1.
- 2. Activate GONG dipswitch to hear the gong when the elevator reaches the floor.
- 3. If you have external arrival arrows, then you need to activate the NOARR dipswitch to remove the Red/Green arrow from the LCD screen.

• Status LED :

Status LED	Description								
Steady	No communication								
Slow Blink	Systen error								
Fast Blink	Communication active with no error								

• Switch setting :

SW #	#	Text		Description																																
	Floc	or Address	0	1	2	3	4	5	6	7	8	9	10	11	1 12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	
	1	1		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		
	2	2			•	•			•	•			•	•			•	•			•	•			•	•			•	•			•	•		
S1	3	4					•	•	٠	٠					•	•	•	•					•	•	•	•					•	•	•	•		
	4	8					\downarrow				•	•	•	•	•	•	•	•									•	•	•	•	•	•	•	•		
	5	16					\downarrow	_							-				•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•		
	6	32					\dashv	_					\vdash		_	\vdash			\vdash		\vdash	\vdash	\vdash		\vdash				\vdash	\vdash	\vdash		<u> </u>		•	
	7	64 REAR																																	_	
	8			ON -> Installed on the rear ON -> Blank the display in fire mode															-																	
	1	FM																_																		
	2 FA ON -> Blank the display in fire alternate mode																																			
	3	NoArr	0	N -	> B	ar	k tł	ne	arr	ow																										
	4	FBLT		ON -> 100% backlight intensity OFF -> 80% backlight intensity (Backlight life enhanced)																																
S2	5	Portrait		ON -> Portrait mode (If existing within the config) OFF -> Landscape mode (If existing within the config)																																
	Com	munication	C.	AN	Vid	ate	ech		CAN JRT CA							N	N GAL				CAN elevator controls					CAN TKE					CAN Smartrise				е	
	6	COM1								(•	•							•														•			
	7	COM2		• •																																
	8	COM3																																		
	1	TAUD	0	ON -> Play all audio file saved in memory																																
	2	GOING	0	DN -> Going Up/Dn active																																
	3	CHIM	0	N -	> P	as	sing	g C	hin	ne	act	ive																								
S3	4	GONG	0	N -	>C	ab	in g	jon	g a	icti	ve																									
	La	anguage	French									English								1 - Frend 2 - Englis											1 - English 2 - French					
	5	LAN1													٠																	•				
	6	LAN2																																		
	7	DEL1	_		> A		-		-		-					-																				
	8	DEL5	0	N -	> A	dd	0.5	i se	eco	nd	of	sile	enc	ea	afte	r th	e s	trol	be																	