


S2120-3X – CANBus position indicator

Installation manual

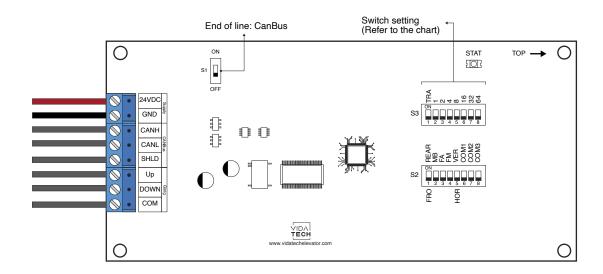

- Supply must be between 16VDC to 30VDC.
- The switch S1 must be set "ON" only on the end of the line position indicator.
- Switch setting :

SW #	#	Text															[)es	crip	otio	n														
	1	REAR/ PRO	OI	REAR = rear and FRO = front. ON -> The position indicator is located at the rear opening. OFF-> The position indicator is located at the front opening.																															
	2	MB																																	
	3	FA	OI	N -:	> B	lank	c th	e di	spla	ay ir	า fir	e al	terr	nate	m	ode																			
S2	4	FM	OI	ON -> Blank the display in fire mode.																															
	5	VER/HOR		ON -> Characters are displayed vertically. A maximum of two characters can be displayed. OFF -> Characters are displayed horizontally.																															
		СОММ	CanBus Vidatech											CAN JRT											CAN GAL										
	6													•																					
	7	COMM																					•												
	8																																		
	1	TRA	OI	ON -> Transition mode is active.																															
S3	Adr	esse Floor	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
	2	1		•		•		•		•		•		•		•		•		•		•		•		•		•		•		•		ullet	
	3	2			•	•			•	•			•	•		Π	•	•			•	•			•	•			•	•			•	$ \bullet $	
	4	4					•	•	•	•					•	•	•	•					•	•	•	•					•	•	•	$ \bullet $	
	5	8								Г	•	•	•	•	•	•	•	•	Г	Г	Г		Г		П		•	•	•	•	•	•	•	$ \bullet $	
	6	16														Γ			•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	\neg
	7	32																																П	•
	8	64																																	