



S0720-3B – CANBus micro position indicator

Installation manual

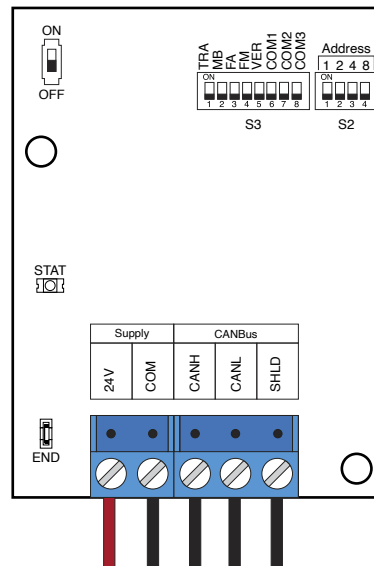

- The micro indicator is available only in Canbus Blue.
- Warning, the Canbus communication is not isolated for this product, please take the appropriate measures with the control manufacturer.
- The STAT LED is indicating the board status. The LED blinks when Canbus communication is UP, or steady if not.
- Supply must be between 16VDC to 30VDC.
- The Jumper End must be put only on the end of the line position indicator.

• Faceplate Cutout :

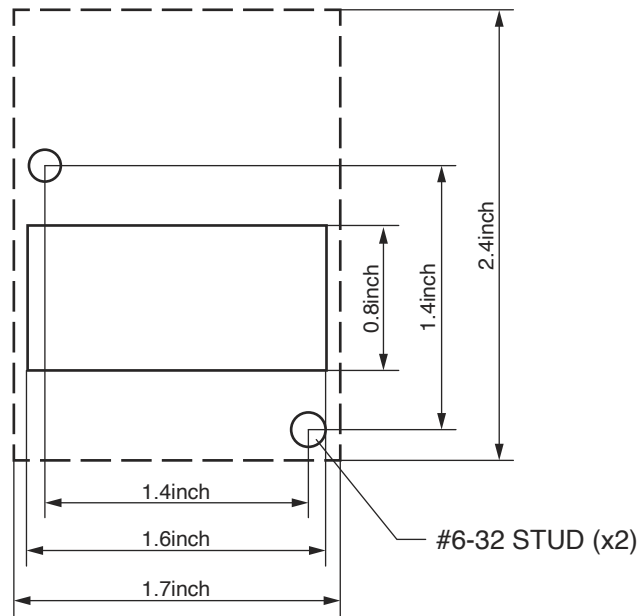

View: From the inside of the faceplate