


# F7021 – CANBus 7” LCD indicator with gong

## Installation manual

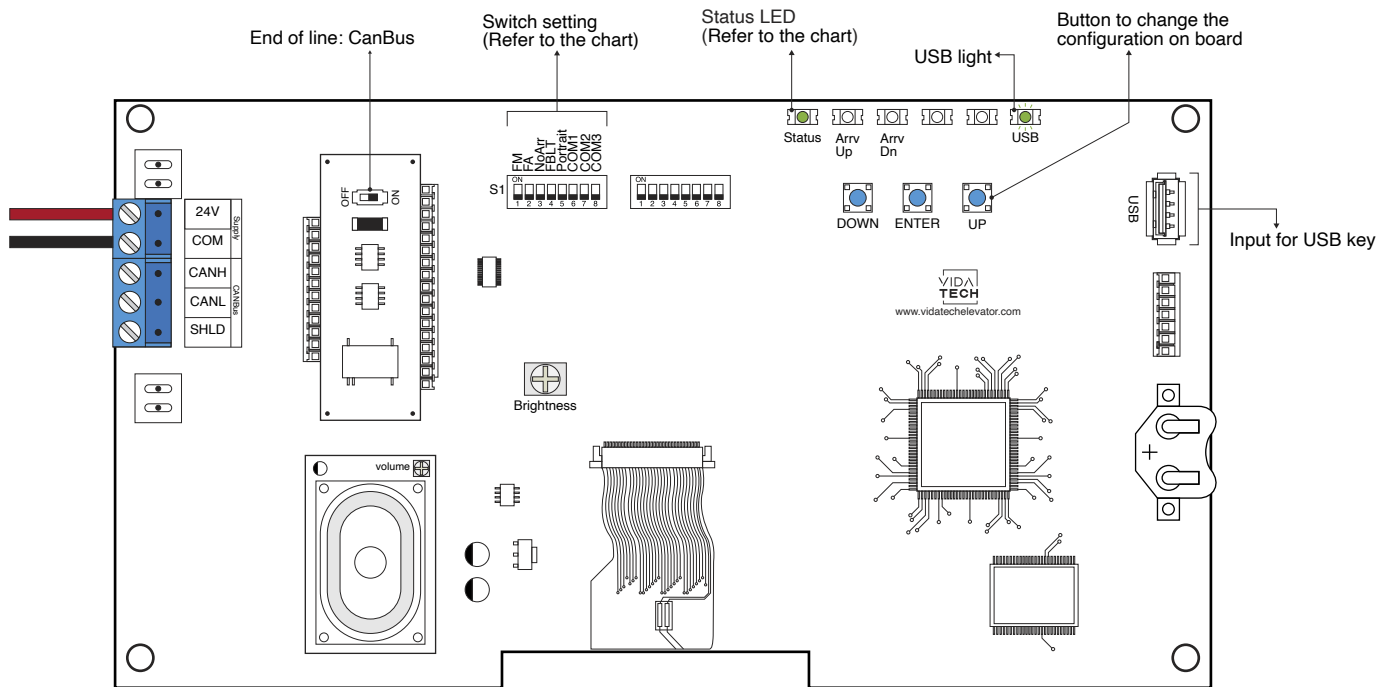

- Supply must be between 16VDC to 30VDC.
- Must be installed in COP
- Brightness of the LCD is controlled by “brightness” potentiometer.
- Press “ENTER” to go the main menu of the LCD, then navigate with “UP/DOWN” switches. Refer to F7022 operation manual on our website.
- Status LED :

Status LED	Description
Steady	No communication
Slow Blink	System error
Fast Blink	Communication active with no error

- Switch setting :

SW #	#	Text	Description		
S1	1	FM	ON -> Blank the display in fire mode		
	2	FA	ON -> Blank the display in fire alternate mode		
	3	NoArr	ON -> Blank the arrow		
	4	FBLT	ON -> 100% backlight intensity OFF -> 80% backlight intensity (Backlight life enhanced)		
	5	Portrait	ON -> Portrait mode (If existing within the config)		
	Communication		CAN Vidatech	CAN JRT	CAN GAL
	6	COM1		●	
	7	COM2			●
8	COM3				

- To activate Gong option, user must program floor adress in the menu.