vidatechelevator.com

S2120-3X – CANBus position indicator

Installation manual

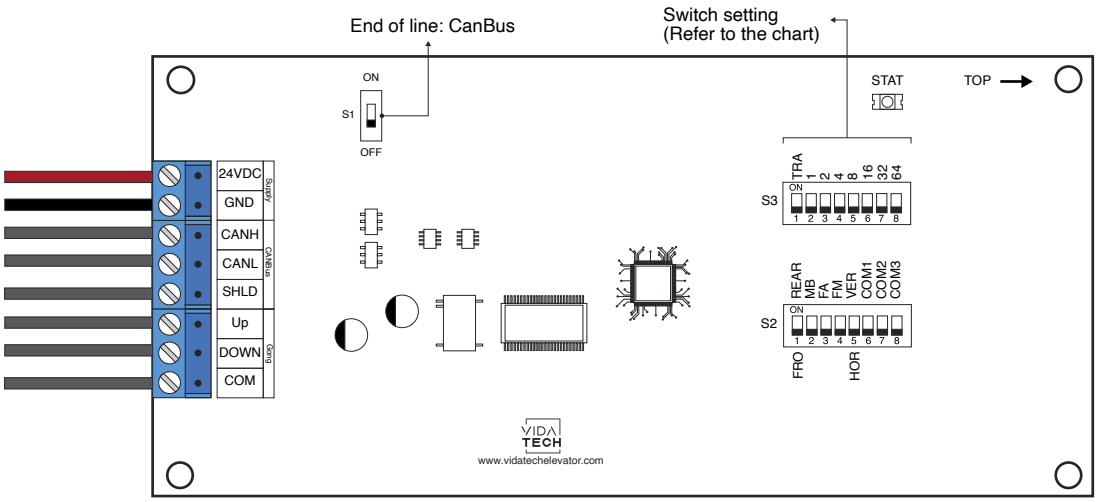

- Supply must be between 16VDC to 30VDC.
- The switch S1 must be set " ON " only on the end of the line position indicator.
- Switch setting :

SW #	#	Text	Description																												
S2	1	REAR/ FRO	REAR = rear and FRO = front. ON -> The position indicator is located at the rear opening. OFF-> The position indicator is located at the front opening.																												
	2	MB	MB = Language setting ON -> French OFF -> English																												
	3	FA	ON -> Blank the display in fire alternate mode.																												
	4	FM	ON -> Blank the display in fire mode.																												
	5	VER/HOR	ON -> Characters are displayed vertically. A maximum of two characters can be displayed. OFF -> Characters are displayed horizontally.																												
	Communication		CAN Vidatech					CAN JRT					CAN GAL					CAN elevator controls					CAN TKE					CAN Smartrise				
	6	COMM 1						●										●										●				
	7	COMM 2											●					●														
	8	COMM 3																					●					●				
S3	1	TRA	ON -> Transition mode is active.																												
	Address Floor		0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
	2	1		●		●		●		●		●		●		●		●		●		●		●		●		●		●		●		●	
	3	2			●	●			●	●			●	●			●	●			●	●			●	●			●	●			●	●	
	4	4					●	●	●	●					●	●	●	●					●	●	●	●					●	●	●	●	
	5	8									●	●	●	●	●	●	●	●									●	●	●	●	●	●	●	●	
	6	16																	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
	7	32																																	●
	8	64																																	