vidatechelevator.com

S2320-XX – CANBus 2.3” position indicator

Installation manual

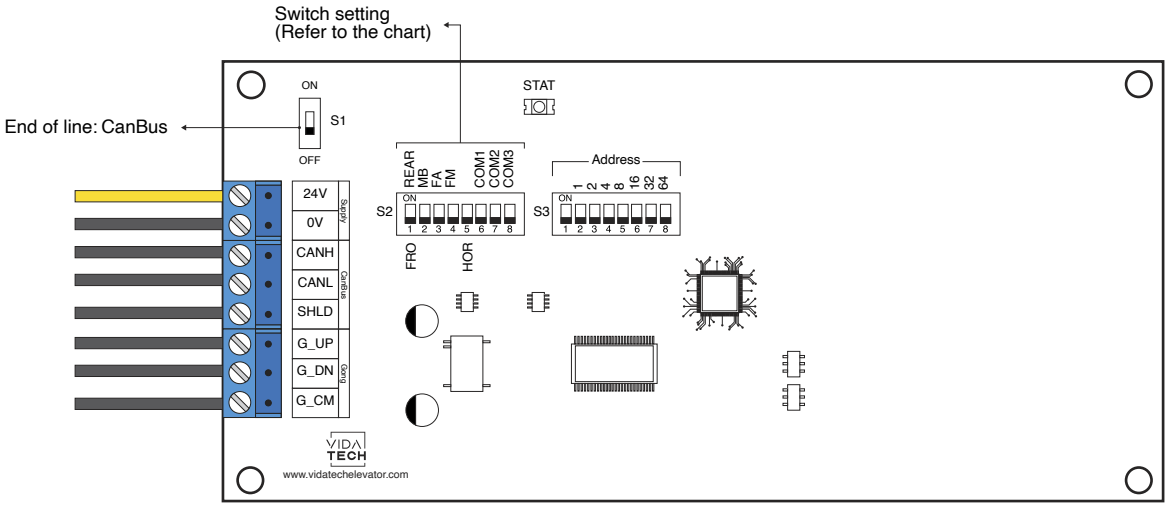

- Supply must be between 16VDC to 30VDC.
- The switch S1 must be set “ ON ” only on the end of the line position indicator.
- Switch setting :

SW #	#	Text	Description
S2	1	REAR/ FRO	REAR = Rear and FRO = Front. ON -> The position indicator is located at the rear opening. OFF-> The position indicator is located at the front opening.
	2	MB	MB = Language setting ON -> French OFF -> English
	3	FA	ON -> Blank the display in fire alternate mode.
	4	FM	ON -> Blank the display in fire mode.
	5		

	Communication	CAN Vidatech	CAN JRT	CAN GAL	CAN elevator controls	CAN TKE	CAN Smartrise
S2	6 COMM 1		●		●		●
	7 COMM 2			●	●		
	8 COMM 3					●	●

		Adresse Floor	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
S3	1																																		
	2	1		●		●		●		●		●		●		●		●		●		●		●		●		●		●		●		●	
	3	2			●	●			●	●			●	●			●	●			●	●			●	●			●	●			●	●	
	4	4					●	●	●	●					●	●	●	●					●	●	●	●					●	●	●	●	
	5	8									●	●	●	●	●	●	●	●									●	●	●	●	●	●	●	●	
	6	16																	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
	7	32																																	●
	8	64																																	